
# User manual

# **MOBI** Light Book

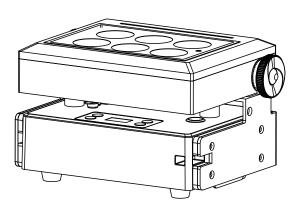



Please read carefully before use

**Packaging:** Thanks for your purchasing the LightBook All the lights have been checked and are in excellent operating condition. Please check the shipping carton first, because there


may be damage occurred during the shipment. Then check the lights carefully and be sure that the lights is intact and works normally. In the event damage has been found, spare parts are missing or the lights works abnormally, please contact us for further instructions. And please don't return the lights to the dealer before contacting us.

 
The LightBook is a mini wall washer with excellent performance. It is 39.5mm long, but its width of covering wall is 5m. Because the light source is 6pcs\*10W RGBW LEDs. IR remote control is included. The house is made of extruded aluminum and die-cast aluminum cover. The ingress protection rating is IP65. However, there is no glue was used into the light. LightBook has won many certifications, including the CE, ROHS and so on.

Notice: Be sure to follow figures two and three when making your own cables.Do not use the ground lug on the XLR connector. Do not connect the cable's shield conductor to the ground lug or allow the shield conductor to come in contact with the XLR's outer casing. Grounding the shield could cause a short circuit and erratic behavior.

14

## **IR Controller**

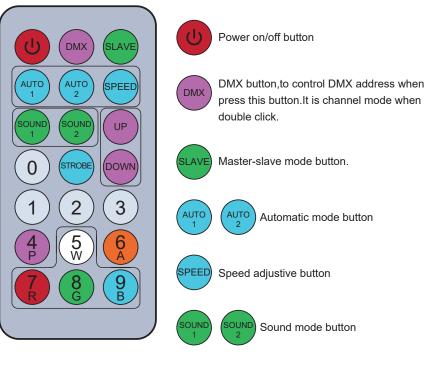







13

You can use these number button to adjust numerical in any program mode.



### **Features**

#### **OPTICS**

- Light Source: 6\*10W, 4 in 1 RGBW LEDs
  Lens: Standard 12°, optinal choose:20,30,45°
- **ELECTRICAL**
- Power consumption: 24W
- Voltage: AC 110 240V, 50/60Hz

#### **BATTERY**

- Battery: Lithium Batteries,11.1V,9AH
- Charge Time: 3.5 Hours
- Working Time: 5H Full Power@24W; 8H full power @20W,12H full power@15W. Maximum 30H with auto mode.

2

#### DYNAMIC EFFECT

- Electronic dimmer, allowing perfect light adjustment from 0 to 100% without color variation;
- Built-in Effect: color mixing, variable color chasing, strobing and fading.

#### CONTROL

- IR Remote Control
- Wireless DMX Solution from Sweden
- Run Mode: With wireless and wired by DMX 512 /Master Slave /Auto Mode


#### **SOFTWARE**

- 10 internal programs
- 4 different dimming curve
- Set refresh rate:600HZ,1200HZ,2400HZ,4800HZ,9600HZ,15000HZ.
- 11 kinds of color temperature white
- · Working time record


#### **PHYSICAL**


- Material: Aluminum body,black sand coat.
- Install solution:M10 holes for Clamp
- Safty ring holes
- Magnetic frost filter(Optional choose)
- Dimensions: 219\*163\*165mm
- N.W: 3 KG
- IP65


## **Programme Menu**

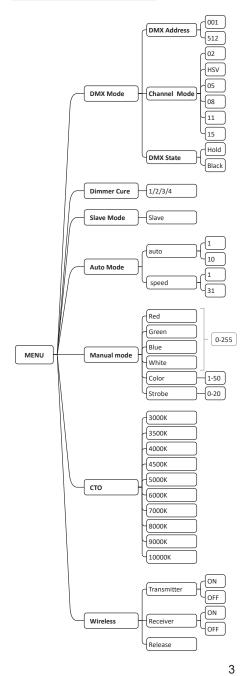

## **Product Overview**

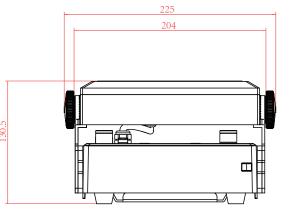

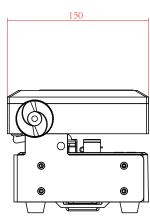


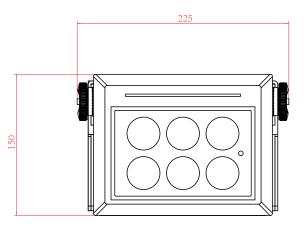

## **CABLE CONNECTORS**

Cabling must have a male XLR connector on one end and a female XLR connector on the other end.

#### DMX connector configuration

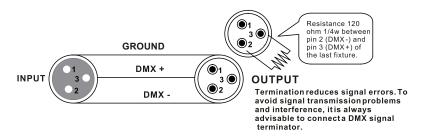


caution:Do not allow contact between the ground and the fixture's chassis ground. Grounding the ground can cause a ground loop, and your fixture may perform erratically. Test cables with an ohm meter to verify positive pole and to make sure the pins are not grounded or shorted to the shield or each other.

## 3-PIN TO 5-PIN CONVERSION CHART

Note! If you use a controller with a 5 pin DMX output connector, you need to use a 5 pin to 3 pin adapter. The chart below details a proper cable conversion:


3-PIN TO 5-PIN CONVERSION CHART

Conductor	3 Pin Female (output)	5 Pin Male (Input)	
Ground/Shield	Pin 1	Pin 1	
Data ( - ) signal	Pin 2	Pin 2	
Data (+) signal	Pin 3	Pin 3	
Do not use		Do not use	
Do not use		Do not use	

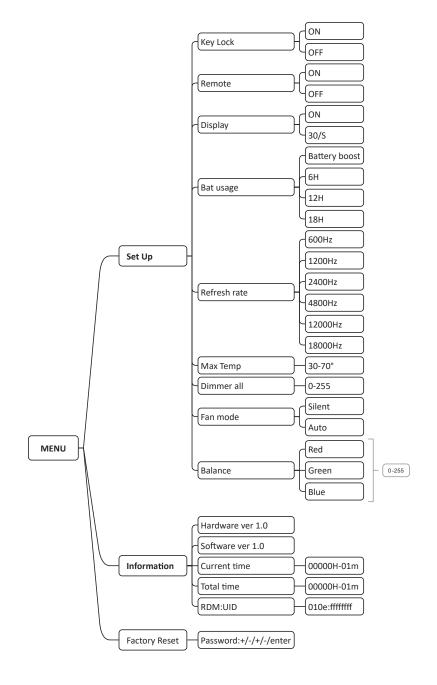

11

## **Displayer introduction**

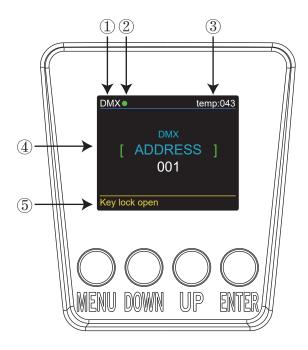


- 1. DMX means the light is in the DMX mode. Similarly, SLAVE means the light is in the SLAVE mode.
- 2. The color of the point shows the condition of signal transmission. Green represents the good condition, while red represents the signal is interrupted.
- 3. The item shows the working temperature of the light. When the working temperature exceeds the max temperature, the color of the letters and number will change from white to yellow.
- 4. This item shows the menu you selected.
- 5. This item shows the condition of key lock. "Key lock open" means the key lock is open. And "Key lock off" means the key lock is close.

## Mounting

When installing the unit, the trussing or area of installation must be able to hold 10 times the weight without any deformation. When installing the unit must be secured with a secondary safety attach-ment, e.g. and appropriate safety cable. Never stand directly below the unit when mounting, removing, or servicing the unit.

Overhead mounting requires extensive experience, including calculat-ing working load limits, installation material being used, and perodic safety inspection of all installation material and unit. If you lack these qualifications, do not attempt the installation yourself.

The installaiton should be checked by a skilled person once a year.

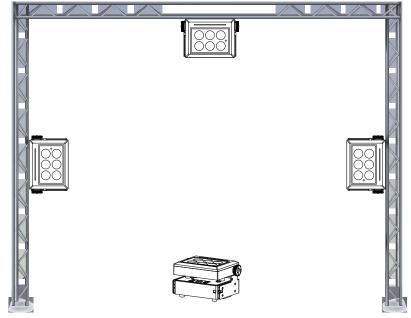

The LightBook is fully operational in two different mounting positions, hanging upside-down from a ceiling or set on a flat level surface. To avoid internal damage to the unit, never mount the unit on its side as illustrated above. Be sure this fxture is kept at least 0.5m away from any flammable materials (decoration etc.). And you'd better use and install the supplied safety cable as a safety measure to prevent accidental damage and/or injury in the event the clamp fails (see next page).

11 CHANNELS		
Channel	Value	Function
1	000 - 255	Master dimmer
2	000 - 255	Red
3	000 - 255	Green
4	000 - 255	Blue
5	000 - 255	White
6	000 - 255	Color 1-color 51
7	000- 255	White color marco: 2500K-10000K
8	000 - 255	Strobe (slow -fast) 25次/s
9	000 - 255	Auto 1-10
10	000 - 255	Auto speed
11	000 - 009	No function
	010 - 029	Linear dimmer
	030- 069	Dimmer 1 (fast)
	070 - 129	Dimmer 2
	130 - 189	Dimmer 3
	190 - 255	Dimmer 4(slow)

15 CHANNELS		
Channel	Value	Function
1	000 - 255	Master dimmer
2	000 - 255	Red
3	000 - 255	Red fine
4	000 - 255	Green
5	000 - 255	Green fine
6	000 - 255	Blue
7	000 - 255	Blue fine
8	000 - 255	White
9	1 - 255	White fine
10	000 - 255	Color 1-color 51
11	000- 255	White color marco: 2500K-10000K
12	000 - 255	Strobe (slow -fast) 25次/s
13	000 - 255	Auto 1-10
14	000 - 255	Auto speed
15	000 - 009	No function
	010 - 029	Linear dimmer
	030- 069	Dimmer 1 (fast)
	070 - 129	Dimmer 2
	130 - 189	Dimmer 3
	190 - 255	Dimmer 4(slow)

DMX ADDRESS - In this menu, you can connect several pieces of lights with DMX cable and control them with control console.

- 1. Press "ENTER" button and then UP or DOWN button until "DMX ADDRESS" is showed.
- 2. Press "ENTER" button, "xxx" will be showed, "x" represents the showed address. You can press the UP or DOWN button to select your desired address.

CHANNELS MODE - In this menu, you can connect several pieces of lights with DMX cable and control them with control console.

- 1. Press "ENTER" button and then UP or DOWN button until "CHANNELS MODE" is showed.
- 2. Press "ENTER" button, "Channel [xx]" will be showed, "X" represents the showed DMX channel mode. You can press the UP or DOWN button to select your desired Channel mode.

DMX CURVE - In this menu, you can sent the DMX CURVE of lights.

- 1. Press "ENTER" button and then UP or DOWN button until "DMX CURVE" is showed.
- 2. Press "ENTER" button, and there will be four options. Then, press ENTER to select the option and press UP or DOWN button to select the value you desire.

DMX STATE - In this menu, you can sent the DMX STATE of lights.

- 1. Press "ENTER" button and then UP or DOWN button until "DMX STATE" is showed.
- 2. Press "ENTER" button, and there will be two options. Then, press ENTER to select the option and press UP or DOWN button to select the value you desire as follow:
- 1) DMX HOLD You can keep the DMX mode;
- 2) BLACKOUT You can blackout the DMX mode so that you can set other mode you desired.

SLAVE MODE - In this menu, you can select SLAVE mode. In SLAVE mode, you can select one light as the MASTER light and other lights in SLAVE mode will run following the MASTER light.

- 1. Press "ENTER" button and then UP or DOWN button until "SLAVE MODE" is showed.
- 2.Press "ENTER" button to set the slave mode.

AUTO MODE-In this menu, you can select your desire AUTO mode and adjust the running speed.

- 1. Press "ENTER" button and then UP or DOWN button until "AUTO" is showed.
- 2. Press "ENTER" button, and "SPEED" or "AUTO MODE" will be showed. Then press ENTER, and

you can see two items as below:

- 1) SPEED You can select your desired speed in this menu.
- 2) AUTO You can select your desired auto mode in this menu.

MANUAL MODE – In this menu, you can adjust the value of static color and strobe speed as you like.

- 1. Press "ENTER" button and then UP or DOWN button until "MANUAL MODE" is showed.
- 2. Press "ENTER" button, and there will be five options. Then, press ENTER to select the option and press UP or DOWN button to select the value you desire as follow:
- 1) RED You can adjust the red brightness in this menu.
- 2) GREEN You can adjust the green brightness in this menu.
- 3) BLUE You can adjust the blue brightness in this menu.
- 4) COLOR You can select 55 static color in this menu.
- 5) STROBE You can adjust the strobe speed in this menu.

SET UP-In this menu, you can adjust the value of the function.

- 1. Press "ENTER" button and then UP or DOWN button until "SET UP" is showed.
- 2. Press "ENTER" button, and there will be eight options. Then, press ENTER to select the option and press UP or DOWN button to select the value you desire as below.
- 1) Dimmer ALL You can adjust the brightness of color in this menu.
- 2) BALANCE You can adjust the brightness of each color (R,G,B) in this menu.
- 3) Key locks You can select whether the password is on or off in this menu, and the password is [DOWN] + [UP] + [DOWN] + [UP]. If you select "on", then you have to input the password before pressing the buttons. Otherwise, the light won't respond to your order.
- 4) REMOTE In this item, you can select "ON" or "OFF". If you select ON, the remote mode will be on. And if you select OFF, the remote mode will be off.
- 5) Display In this item, you can select "ON" or "30S". If you select "ON", the displayer will be on all the time. And if you select "30S", the displayer will extinguish about 30S seconds later.
- 6) RESET-In this menu, you can reset all the value of the system.
- 7) REFRESH RATE In this item, you can set the refresh rate.
- 8) Max temp You can set the your desired Max working temperature about the light in this menu. When the working temperature of the light exceeds the Max temperature, the color of letter "Temp xx" showed in the menu will change from white to yellow. Meanwhile, the light will adjust the working temperature automatically.

INFORMATION-In this menu, you can learn about the information of software, hardware and the

working time of the light.

- 1. Press "ENTER" button and then UP or DOWN button until "INFORMATION" is showed.
- 2. Press "ENTER" button, and "Software" "Hardware" or "Fix times" will be showed. Then press ENTER, and you can see three items as below:
- 1) Software Ver This item displays the Software information.
- 2) WORKING TIMES This item displays the Working time.
- 3) RDM: UID This item displays the RDM Version.

### **DMX** control mode

2 CHANNELS		
Channel	Value	Function
1	0-255	Color 1-color 51
2	0-255	White 1-white10(3000K-10000K)

HSV CHANNELS		
Channel	Value	Function
1	0-255	Hue
2	0-255	Saturation
3	0-255	Value (brightness)

5 CHANNELS		
Channel	Value	Function
1	000 - 255	Red
2	000 - 255	Green
3	000 - 255	Blue
4	000 - 255	White
5	000 - 255	Strobe (slow -fast) 25次/s

8 CHANNELS		
Channel	Value	Function
1	000 - 255	Master dimmer
2	000 - 255	Red
3	000 - 255	Green
4	000 - 255	Blue
5	000 - 255	White
6	000 - 255	Color 1-color 51
7	000 - 255	White 1-white 10 (2500K-10000K)
8	000 - 255	Strobe (slow -fast) 25次/s